


# HERO<sup>®</sup> Alarm User Guide



**WARNINGS:** Protect ears when testing. Keep away from water. Do not disassemble, heat, puncture, or damage battery. Do not use if swollen or wet.

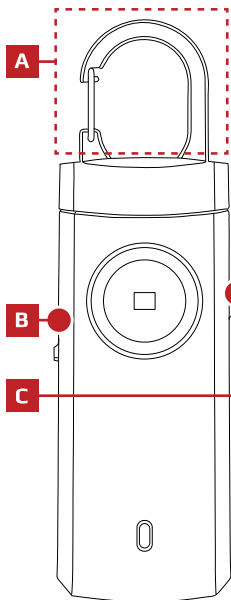

## Using the Alarm

1. Remove loop clip (A) by pulling up. Alarm sounds and light flashes.
2. Replace loop clip to disengage.

## Using the LED Light

1. Press Light button (C) to turn on.
2. Press again to enable strobe.
3. Press again to turn off.

## Charging the Battery

1. Red light signals low battery. Insert cable (B), blue light signals charging. 1.5 hours to fully charge.
2. Charging complete when light turns off. Remove charge cable.

Size: 3.8 x 1.1 x .6 in

Alarm: 130 dB

LED: 40 lumens

Battery: 3.7V 120 mAh

Standby Time: 1 year

Usage Time: 1 hour